

# How to Repair and Reinforce Erkoflex



1 Remove the damaged Erkoflex pad from the device



2 Cut a small piece of Erkoflex and heat it in the oven. Meanwhile, heat the Erkoflex pad for better adhesion with a heat gun




3 Stretch the heated piece of Erkoflex to the same thickness of the pad and adhere it to the pad



4 Cut off any excess and grind smooth



5 Using dacron or tape, reinforce the area where you are going to place the rivets. With a hole punch, punch a hole that is slightly smaller than the rivet post

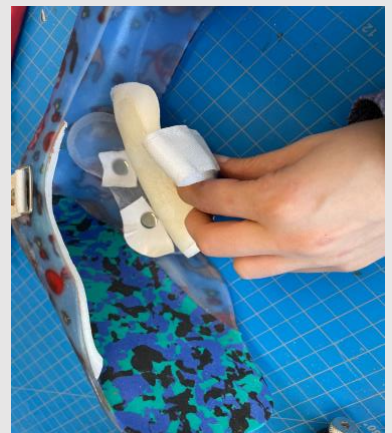

6 Rivet the pad to the device and glue thermofoam pad over